

Absolute

Installation Instructions for Absolute Frost Box

Kit Includes


Pre-drilled Backplate	Top Insulation
Wall Plugs	Decorative Cap
Insulation Sleeve	Stacking Clip
Face Plate	Fixings

Support

support@absolutewatertech.co.uk


1 Confirm Position

Agree the new supply pipe entry point with the property owner. Remove the Absolute Frost Box from its packaging and take out the pre-drilled back plate.

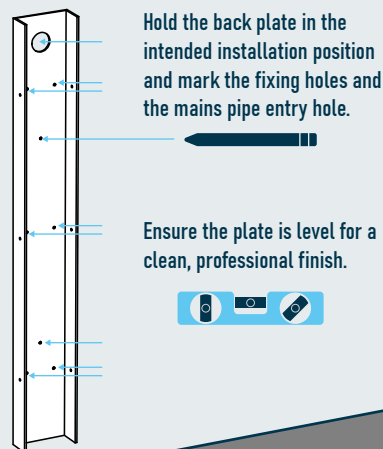


2 Drill & Core Holes

Drill the marked wall fixing holes and insert the supplied wall plugs. Core-drill the mains entry hole to the diameter specified by your local water authority.

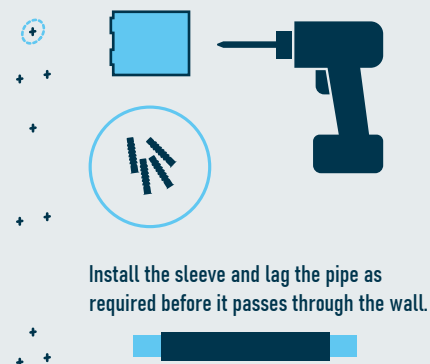

3 Fix the Back Plate

Position the back plate against the wall and secure it using the supplied fixings.

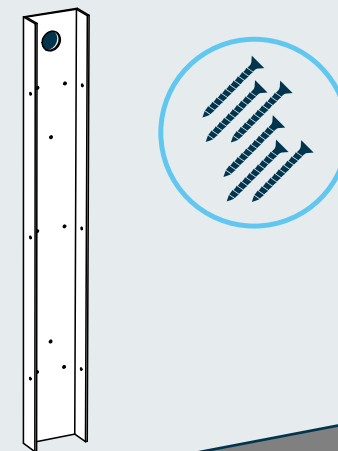


4 Install Rear Insulation & Pipework

Insert the rear section of insulation into the box.

Run the pipework through the wall and into position within the insulation in accordance with local water authority requirements.


Once the pipework is installed the core hole should be sealed to stop any draft or moisture entering the property.

Note: When the pipe is running below ground, it needs to be in an insulated conduit to a depth of up to 750 mm

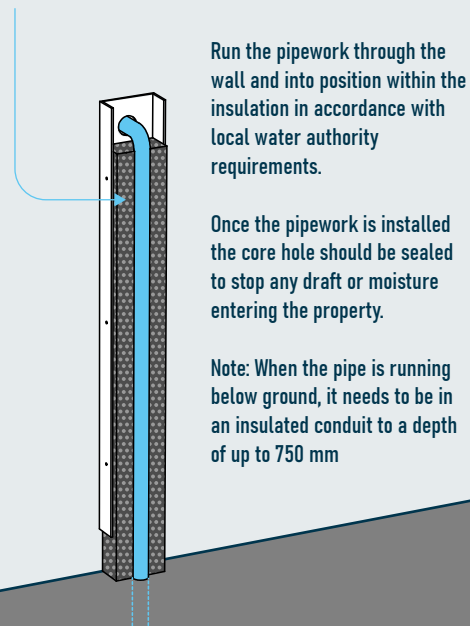


5 Install Stacking Clips (if needed)

This step is only needed if using multiple boxes for a higher pipe entry. Install the back plates and stacking clips until the desired height of entry point is reached. Secure stacking clip using the black tree clips provided.

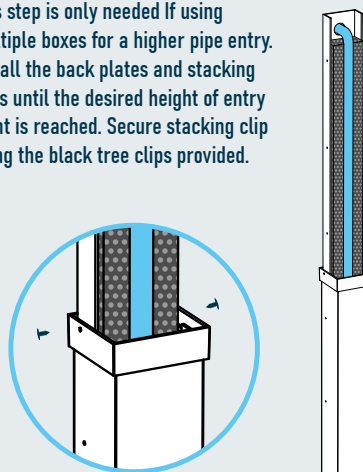


6 Fit Front Insulation & Face Plate

Install the front insulation section.

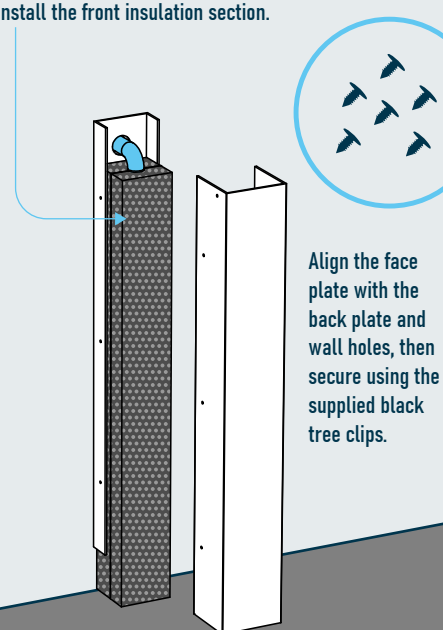

7 Fit Top Insulation & Decorative Cap

Place the top insulation pieces into the upper section of the Frost Box.

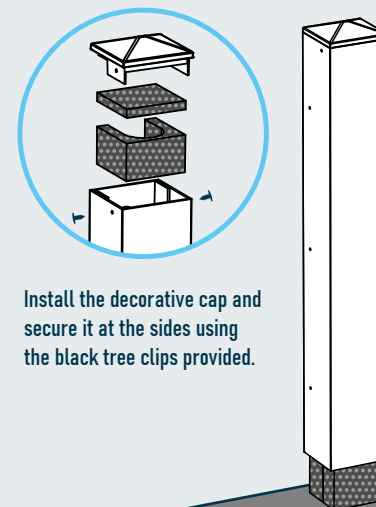

Please note: Frost box installation's may be notifiable with the Local Water Authority, and you will need check this before installation. Any pipework installed externally and not buried between 750mm and 1350mm is notifiable to the local water company in all cases.